



FP103Ex

**ATEX / IECEx
ZONE 1/21**

USER MANUAL



Document No. 103HUMREV00
© 2025 HAEXC Mobile Pte. Ltd.
HAEXC Mobile Pte. Ltd.
2 Joo Koon Circle, Singapore 629031
Tel. +65 6100 9156
info@haexc-mobile.com
www.haexc-mobile.com

Content

1. Charging the Phone.....	5
2. Using the Phone.....	5
3. Cleaning, maintenance and storage attention.....	9
4. Recycling.....	9
5. Disposal.....	9
6. Warranty and Liability.....	10
7. EU Declaration of Conformity.....	10
8. FAQ.....	10
9. EU Member States Frequency.....	10
10. Bands and Mode.....	11

1. Charging the Phone

The battery is not fully charged when the device is purchased, but it contains enough energy to power on the device. If the battery is completely discharged, the phone will not switch on and the display will not show a charging process. Connect the phone to the charger.

After charging for a few minutes the display will appear again and you can then switch on the phone.

Note

- There is a risk of explosion if the device is exposed to a flame.
- Do not short-circuit the battery.
- The battery does not contain any parts that can be exchanged.
- The casing of the battery should not be opened under any circumstances.
- Use only HAEXC charging accessories.
- The use of any other charging accessories or batteries is prohibited, as it may compromise Ex-protection.
- The device may only be charged at temperatures between +5°C ... +40°C.

2. Using the Phone

2.1 Operating Function


For more information on how to use & setting up the android phone, please refer to below link.

<https://support.google.com/android/#topic=>


2.2 Switching between Virtual Keyboard and Keypad

To switch between Virtual Keyboard and Keypad, swipe down the screen from the top, tap on “Virtual Keyboard” to choose as shown.


2.2.1 Virtual Keyboard Mode

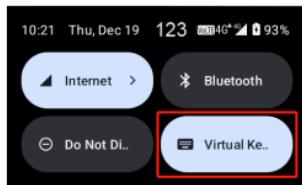

2.2.2 Keypad Mode

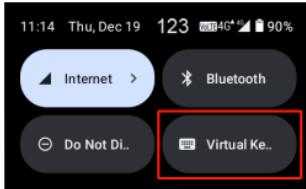

2.3 The functions of the key buttons

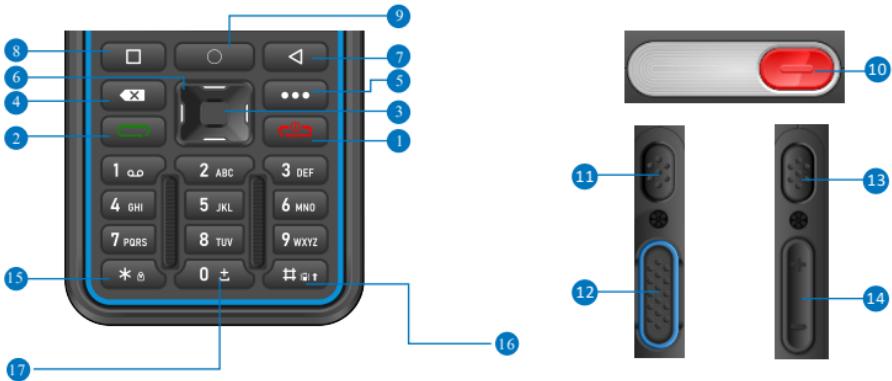

- 1 “” Key
 - Short press to end / reject the call.
 - Long press to power on / off the device.
- 2 “” Key
 - Short press to accept the call.
- 3 “” Key
 - OK Key

4 “” Key

- Short press to delete entered text.

5 “” Key (FN Key)

- Short press to trigger camera. (Default Pre-set)
- Long press to switch on / off the LED torch light.

6 “” Key

- Short press to navigate in up, down, left and right directions.

7 “” Key

- Return Key

8 “” Key

- Short press to trigger task window.

9 “” Key

- Short press to back to home screen.

10 “” Key

- Long press to give an alarm.

11 “” Key (For future use)

- Short press to change PTT group.

12 “” Key

- Short press to start speaking in push to talk.

13 “ ” Key (FN Key)

- Short press to trigger camera. (Default Pre-set)



14 “ ” Key

 
- “ + ” to increase volume
- “ - ” to decrease volume

15 “ * ” Key

- Short press to type * character.
- Long press to trigger screen lock.

16 “ # ” Key

- Short press to type # character.
- Long press and release to trigger Do Not Disturb mode.



- Double-press to cycle through the following three keypad modes.



Number Mode



Lowercase mode



Uppercase mode

17 “ 0 ” Key

- Keypad mode  press to type “ 0 ”.
- Keypad mode  
 - Single press to insert “ blank space ”.
 - Double press to type “ + ”.

3. Cleaning, maintenance and storage attention

- Only use a suitable cloth or sponge to clean the phone.
- Do not use any solvents or abrasive cleaning agents when cleaning.
- It is recommended that you have the functionality and accuracy of the phone inspected by the manufacturer every two years.
- Do not exceed the permissible storage temperature range of -20 °C ... +60 °C!
- Recommended temperature for long term storage is 20°C ± 3°C.
- In the event when the phone with battery not in use for long period of time, it is essential for user to charge battery once every 3 months to maintain battery health.

4. Recycling

The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life.

This requirement applies in the European Union.

Do not dispose of these products as unsorted municipal waste. Always return your used electronic products, batteries, and packaging materials to dedicated collection points.

This way you help prevent uncontrolled waste disposal and promote the recycling of materials. More detailed information is available from the product retailer, local waste authorities, national producer responsibility organizations, or your local HAEXC Mobile Pte. Ltd. representative.

5. Disposal

5.1 Disposal of Old Electrical and Electronic Equipment



The symbol of the crossed-out wheeled bin indicates that within the countries in the European Union, this product, and any enhancements marked with this symbol, can not be disposed as unsorted waste but must be taken to separate collection at their end of life.

5.2 Disposal of Battery



Please check local regulations for disposal of batteries. The battery should never be placed in municipal waste. Use a battery disposal facility if available.

6. Warranty and liability

Handset: 12 months warranty

Replaceble battery: 12 months warranty

7. EU Declaration of Conformity

The EU declaration of conformity is enclosed with the sales packaging as a separate document.

Please also observe the information provided underneath the table of contents.

8. FAQ

Please kindly visit HAEXC website for more FAQ information.

www.haexc-mobile.com/support/FAQ/

9. EU Member States Frequency



BE	BG	CZ	DK	DE	EE	IE	EL
ES	FR	HR	IT	CY	LV	LT	LU
HU	MT	NL	AT	PL	PT	RO	SI
SK	FI	SE	NO	IS	LI	CH	TR

In all EU member states, operation of 5150-5250 MHz is restricted to indoor use only.

10. Bands and Mode

Band and Mode	Max. Output Power
BT	1.7 dBm
BLE	-6.07 dBm
WLAN	14.83 dBm
RLAN	15.26 dBm
GSM900	32.55 dBm
DCS1800	31.24 dBm
WCDMA 900	24.65 dBm
WCDMA 2100	25.66 dBm
LTE Band 1	23.7 dBm
LTE Band 3	23.8 dBm
LTE Band 7	23.4 dBm
LTE Band 8	23.9 dBm
LTE Band 20	23.5 dBm
LTE Band 28	23.7 dBm
LTE Band 38	23.8 dBm
LTE Band 40	24.2 dBm
LTE Band 41	23.9 dBm

The content of this document is presented as it currently exists.

HAEXC Mobile Pte. Ltd. does not provide any explicit or tacit guarantee for the accuracy or completeness of the content of this document, including, but not restricted to, the tacit guarantee of market suitability or fitness for a specific purpose unless applicable laws or court decisions make liability mandatory.

HAEXC Mobile Pte. Ltd. reserves the right to make changes to this document or to withdraw it any time without prior notice. Changes, errors and misprints may not be used as a basis for any claim for damages. All rights reserved.

HAEXC Mobile Pte. Ltd. cannot be held responsible for any data or other loss and direct or indirect damages caused by any improper use of this device.

© 2025 HAEXC Mobile Pte. Ltd.

HAEXC Mobile Pte. Ltd.

2 Joo Koon Circle, Singapore 629031

www.haexc-mobile.com